

XT-1000/2000 DRIVE ADDRESS SELECTION JUMPER

In multiple drive configurations, it is necessary to configure each drive (maximum of 4 per host controller) with a unique address. This is accomplished by locating the jumper plug over the correct pins. (Refer to Figure 23 and Table 8). The standard drive is shipped as Drive 1.

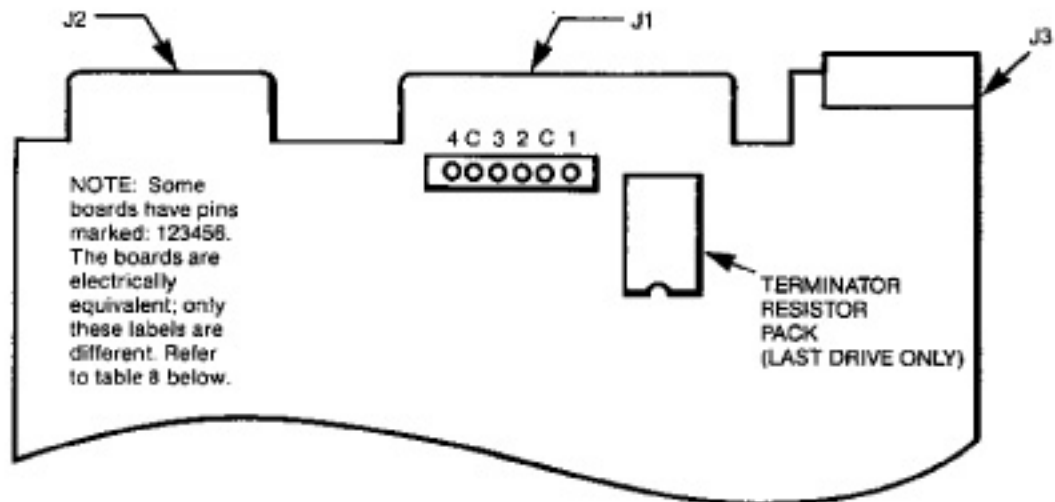


Figure 23
Drive Select Jumper Location

| BOARD LABEL | 4C32C1 | 123456 |
|----------------|--------------------------|--------------------------|
| FUNCTION | JUMPER BLOCK PIN NUMBERS | JUMPER BLOCK PIN NUMBERS |
| DRIVE SELECT 0 | 1.C | 5,6 |
| DRIVE SELECT 1 | 2.C | 4,5 |
| DRIVE SELECT 2 | 3.C | 2,3 |
| DRIVE SELECT 3 | 4.C | 1,2 |

Table 8
Drive Select Jumper Options