

IBM Quad Digital Trunk Telephony PCI
Adapter (DTTA)
Feature Code 6312 and Feature Code 6313

Installation and User's Guide

First Edition (January 2003)

© International Business Machines Corporation 2003. All rights reserved.

Note to U.S. Government Users -- Documentation related to restricted rights -- Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp

Handling Static Sensitive Devices	Page 4
About This Book	Page 5
ISO 9001	Page 5
Trademarks	Page 5
Chapter 1. Product Description	Page 6
Part Number	Page 6
Chapter 2. Installation	Page 7
Hardware Requirements	Page 7
Software Requirements	Page 7
Installing the IBM Quad Digital Trunk Telephony PCI Adapter	Page 8
H.100 Connections	Page 8
Synchronisation of Trunk Clocks	Page 9
Jumper Installation Information	Page 9
Connecting H.100 Adapters Together	Page 10
Prerequisites	Page 10
IBM Quad Digital Trunk Telephony PCI Adapter Internal Cabling	Page 10
Connecting a DTTA Adapter to the Telephone Network	Page 11
Prerequisites	Page 11
Procedure	Page 11
Important Notes.	Page 11
Chapter 3. Problem Determination	Page 12
Diagnostic Wrap Plugs	Page 12
Chapter 4. Telecommunications Cables and Connectors	Page 13
RJ-48C Jack Connector Socket	Page 14
T1/E1 Crossover cable: RJ-48C/RJ-48C	Page 15
T1/E1 Crossover cable: RJ-48C/DB15	Page 17
T1/E1 Straight - Through cable: RJ-48C/DB15	Page 18
Appendix A. Communications Statements	Page 19
Federal Communications Commission (FCC) Statement	Page 19
European Union (EU) Statement	Page 19
International Electrotechnical Commission (IEC) Statement	Page 20
Canadian Department of Communications Compliance Statement	Page 20
VCCI Statement	Page 20
Electromagnetic Interference (EMI) Statement - Taiwan	Page 20
Radio Protection for Germany (NEEDS UPDATING)	Page 21
China, EMC Statement	Page 21
Telecommunications Statements	Page 22
FCC Part 68 Compliance Information	Page 22
Canada Telecommunications Statement	Page 23
Notices for New Zealand Users (New Statement needed)	Page 23

Handling Static Sensitive Devices

Attention: Static electricity can damage this device and the system unit. To avoid damage, keep this device in its static protective bag until you are ready to install it. To reduce the possibility of electrostatic discharge, follow the precautions listed below:

- Limit movement. Movement can cause static electricity to build up around you.
- Handle the device carefully, holding it by its edges or its frame.
- Do not touch solder joints, pins, or exposed printed circuitry
- Do not leave the device where others can handle and possibly damage the Device.
- While the device is still in its antistatic package, touch it to an unpainted metal part of the system unit for at least two seconds. (This drains static electricity from the package and from your body.)
- Remove the device from its package and install it directly into the system unit without setting it down. If it is necessary to set the device down, place it on its static-protective package. (If the device is an adapter, place it component-side up.) Do not place the device on a system unit cover or on a metal table.
- Take additional care when handling devices during cold weather, as heating reduces indoor humidity and increases static electricity.

About This Book

This book describes the IBM Quad Digital Trunk Telephony PCI Adapter. Use this information along with the system unit documentation to help install the adapter and prerequisite software.

Terminology Note

<p>Throughout this book, the IBM Quad Digital Trunk Telephony PCI Adapter will be used synonymously with DTTA.</p>

ISO

9001

ISO 9001 registered quality systems were used in the development and manufacturing of this product.

Related Information

This book refers to documentation that came with the system unit.

Trademarks

AIX, RS/6000, p-Series and IBM are registered trademarks of International Business Machines Corporation.

Other company, product, and service names may be trademarks or service marks of Others.

Chapter 1. Product Description

The IBM Quad Digital Trunk Telephony PCI Adapter (DTTA), Feature Code 6312, is a full-size PCI adapter that supports 32/64-bit busses at bus speeds up to 66 MHz and is compliant with PCI Local Bus Specification Revision 2.2. Feature Code 6313 is the IBM Quad Digital Trunk Telephony PCI Blind Swap Adapter. Feature Code 6313 consists of a DTTA installed in the Blind Swap Cassette (BSC). It is intended to facilitate the use of the IBM Quad Digital Trunk Telephony PCI Adapter (DTTA) in those machines that support the BSC. The DTTA assembly consists of a base and daughter card, however the Field Replaceable Unit (FRU) for FC 6312 is the total assembly. (It should not be necessary to separate the DTTA assembly at any time). FC 6313 has two FRUs; the DTTA assembly, which is same as FC 6312, and the BSC.

The DTTA is designed to be functionally equivalent to the IBM ARTIC960RxD Quad Digital Trunk PCI Adapter (DTXA) IBM Feature Code 6310.

The adapter is designed specifically to process voice data supplied by a telephony connection on a pSeries computer using Websphere Voice Response for AIX software product, providing three functions:

- Connection of the PCI bus of the pSeries computer to the voice processing function of the adapter.
- Voice processing, using Digital Signal Processors (DSP's) to perform such functions as voice compression and tone detection.
- Interfacing of the voice processor to the digital telephony trunk. One adapter can support up to four (4) T1 (100 ohm) or E1 (120 ohm) Digital Trunk interfaces. The adapter provides four RJ-45/RJ-48C sockets at the rear of the adapter for connection to user-supplied cables.

The adapter also has a top card H.100 interface connection, which is the industry standard for the interconnection of multiple telephony adapters in PCI systems. This interface is used to synchronise clocks when multiple adapters are installed and to support functions such as voice recognition, FAX and channel to channel connection (tromboning).

All functional code for the adapter is provided by IBM Websphere Voice Response for AIX software product and downloaded during boot-up.

The DTTA is not intended to be connected to lines that go outside the building. It does not have the surge and isolation characteristics to meet the inter building requirement. Therefore, any lines that go outside the building need to have some type of "isolation" equipment located between line coming from the outside and the DTTA. This can be a CSU or any other type of equipment that isolates the line (i.e. that which provides the surge and isolation characteristic that meet the inter building requirement).


The DTTA conforms to CCITT G703 which states:

- "For E1 the total loss between the transmitted and received signal must be no more than 6 dB at 1024 kHz"
- " For T1, the power level at 772 kHz of the received signal must be in the range +12dBm to +19dBm measured in a 3 kHz bandwidth"

In the United States the DTTA has an FCC Equipment Classification "XD", 'System Ports Connecting to CSU', conforming to DSX-1 interface. When the DTTA is connected to a central office switch via a T1 trunk, the connection must be made through a *Channel Service Unit* (CSU). The CSU protects the circuit against power surges and allows the telephony company to test the trunk.

In other countries, a CSU or equivalent device (eg. NT1, NCTE, NPD etc.) may also be needed if the DTTA is connected to a Central Office/Network Switch. A CSU or equivalent device may also be

needed if the DTTA is being connected to a PBX or channel bank etc. and the distance is such that the cable loss exceeds the requirements of G703 (6dB) or the cable exits the building. Where 75 ohm connection is required this can be achieved with an appropriate Balun such as "Black Box Balun MT242A-M or MT242A-F". This particular Balun was certified as part of the approval testing of this adapter. However, the local telecom company may specify a particular device

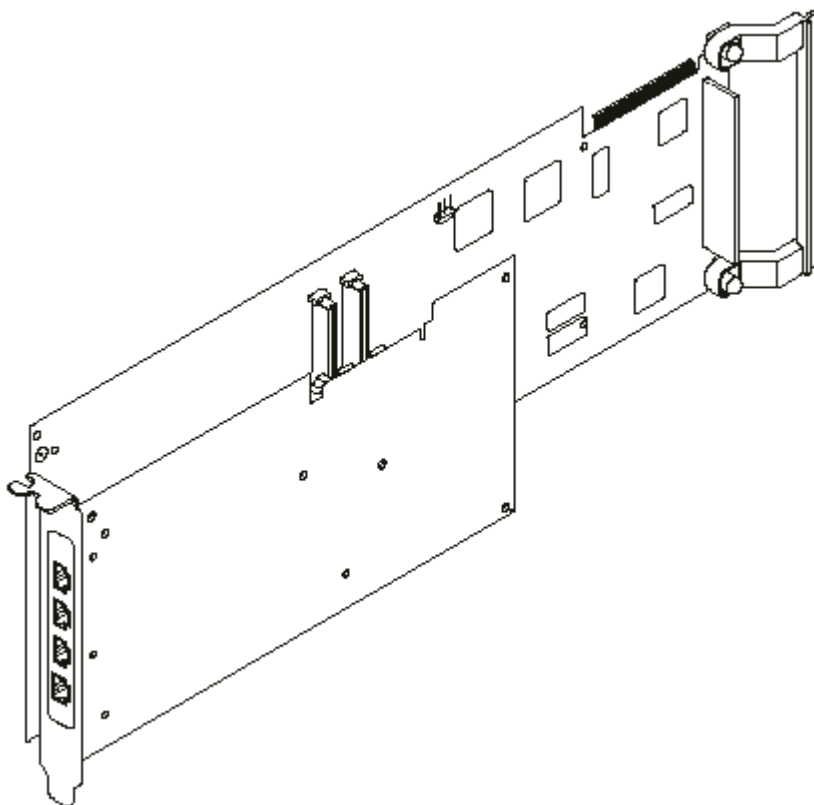**Part Number**

The DTTA Field Replaceable Unit (FRU) Part Number is 00P3119.

Note: The IBM Quad Digital Trunk Telephony PCI Adapter is an EMC FCC and CISPR Class A device.

The Federal Communications Commission (FCC) classification for this product might differ from the FCC classification for the system unit. Use the classification that is highest. For example, if the FCC classification for the system unit is Class B and a Class A card is installed, the classification of the system unit would change to Class A.

Chapter 2. Installation

Each IBM Quad Digital Trunk Telephony PCI Adapter (DTTA) package includes the following:

- The Adapter Assembly (Feature Code 6312 or 6313)
- Reference to this book via web site location
- Diagnostic Wrap Plugs part Number 87H3588 X 4.

Hardware Requirements

The IBM Quad Digital Trunk Telephony PCI Adapter is a universal voltage 32/64-bit PCI device capable of operating in either 33 or 66 MHz slots. It can be installed in supported RS/6000's and p-Series systems. The DTTA is not "Hot Pluggable", see **Note 2.** under "Installing the IBM Quad Digital Trunk Telephony PCI Adapter". For the current list of supported systems, contact the installing IBM representative.

A maximum number of DTTA's supported by a given machine is specified by the particular system unit, please do not exceed this number. Refer to the publication "PCI Adapter Placement Reference" Form No. SA38-0538 Section "Digital Trunk PCI Adapter Considerations", for correct placement of adapters. **The IBM Quad Digital Trunk Telephony PCI Adapter (Feature Code # 6312) cannot coexist with the IBM ARTIC960RxD Quad DTA (Feature Code # 6310).**

The following cables are needed:

- One or more RJ48C telephony cables to connect each DTTA Port to a T1 or E1 Digital Trunk. See section "Cables and Connectors"
(Note these RJ-48C cables are not supplied by IBM)
- One or more cables to connect DTTA's together and to other H.100 adapters in the system. (see "H100 connectors" on page 8). **Note:** When DTTA's are delivered installed in the system unit the factory will install H.100 cable; however, it is possible that adapters may need to be moved in order to suit a particular partitioning scheme, in which case please refer to the system's documentation for instructions on how to move adapters. Keep in mind that when two or more DTTAs are installed in a system or the same partition, the H.100 cable **must** be installed in order for WebSphere Voice response for AIX to function in that system or partition. If installing only one DTTA and there is no intention to connect to any other H.100 adapters, the H.100 cables are not required.

(See following sections for cable part numbers and installation)

Software Requirements

The IBM Quad Digital Trunk Telephony PCI Adapter will only be supported on IBM WebSphere Voice Response for AIX Program Product version 3.1 (PTF Level XXXXXX) or higher running under AIX versions 5.X or higher.

The Device Driver and Diagnostics are only shipped with IBM WebSphere Voice Response for AIX

Installing the IBM Quad Digital Trunk Telephony PCI Adapter

The following procedure describes how to install the DTTA into the system unit. The steps may vary depending on the system unit, particularly if it is a system which supports a Blind Swap Cassette (BSC). Refer to the documentation that came with the system unit for detailed instructions on performing the following procedures:

If a single DTTA (Feature Code 6312 or 6313) was ordered with a new RS/6000 or p-Series machine and there is no intention to connect to other Scbus or H.100 adapters, then DTTA is already installed in the machine, proceed directly to "Connecting a DTTA Adapter to the Telephone Network".

If multiple DTTA's (Feature Code 6312 or 63113) were ordered with a new RS/6000 or p-Series machine and their installation will suit the customer's partitioning scheme, then proceed directly to "Connecting a DTTA Adapter to the Telephone Network".

However, if DTTA's need to be moved to suit a particular partitioning scheme OR the intent is to connect to other H.100 adapters, then follow the procedure below.

If the DTTA (Feature Code 6312 or 6313) (Single or multiple) was ordered as an addition to an existing installation, then follow the procedure below.

Note 1: Ensure that the jumper JP1 is set as described in "Jumper Installation Information" If FC 6313 was ordered and it is the third or fourth instance of FC 6313, then the BSC must be disassembled before JP1 may be moved.

Note 2: The WebSphere Voice Response for AIX software product (for which the DTTA is designed) does not support replacement of adapters whilst still running. If the RS/6000 or p-Series supports adapter replacement while the machine is still powered on (but with the adapter slot powered off using a machine utility) the WebSphere Voice Response software must be stopped before any such operation.

- Be sure to perform necessary shutdown procedures to protect the system and data.
- Shut down the system unit
- Remove the system unit covers, refer to the documentation that came with the system
- Set the DTTA jumper JP1 as described in "Jumper Installation Information". If FC 6313 was ordered, then the DTTA must first be removed from the BSC before JP1 is moved. After JP1 is moved, place the DTTA back into the BSC.
- Install the DTTA Adapter into the system unit
- Install the H.100 cable if necessary (see following sections)
- Replace the system unit covers
- Ensure that the network or PBX is configured as clock master. See "Synchronisation of Trunk Clocks"
- Confirm that the Network Protocol matches that configured in WebSphere Voice Response.

H.100 Connections

All DTTA, and any other H.100 adapters in an RS/6000 or p-Series must be connected together using an H.100 top-connector cable. This is to synchronise clocks on the adapters and to support functions such as voice recognition and channel-to-channel connection (tromboning). H.100 is the industry standard for connection of telephony adapters in PCI systems.

To make connection easier, install H.100 adapters in adjacent slots in the RS/6000 or p-Series system unit.

Two cables are available as feature codes, along with three cable specify codes for Feature Code 2877. (see Table 1). Order the required cable(s) to suit the application. When using multiple DTTAs in a partition, the correct Grouping Indicator must also be specified.

Table 1. H.100 Cables fo DTTA Adapter

Feature Code	Cable
2877	4-way H.100
4353	8-way H.100
9007	2 Slot Grouping Indicator
9008	3 Slot Grouping Indicator
9009	4 Slot Grouping Indicator

Normally use cable F/C 2877 for up to 4 adapters in adjacent slots.

Cable F/C 4353 can be used when adapters are not in adjacent slots.

Synchronisation of Trunk Clocks

DTTA trunk interfaces are designed to operate in a clock-slave mode where the adapter attempts to recover the clock from the received signal and synchronises its transmit clock to this recovered received clock. If the network or PBX is not configured as a clock master, incorrect operation and clock instability may result.

For DTTA systems, unsynchronized trunk clocks can be handled by the adapter but it adjusts the internal clock in order to normalise all clocks to the internal bus using a clock slippage algorithm. This will probably not be noticeable on voice, but may result in excessive data errors if trunks are being used for other types of data, such as fax.

For this reason, it is strongly recommended that all trunk clocks be synchronised (this will probably be the case naturally with direct network connections, but channel banks may require some special attention).

Jumper Installation Information

Jumper JP1 is used to terminate each end of the H.100 chain, and should be set as follows:

If the adapter to be installed is NOT connected to either end of the H.100 Cable (see the illustration on page 12), then set the jumper as shown in Figure A, to the right.

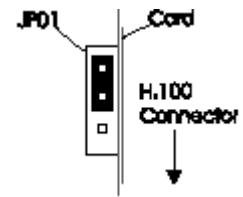


Figure A

If the adapter to be installed is connected to either end of the H.100 Cable (see the illustration on page 12), the jumper must be installed as shown in Figure B, to the right.
If the adapter to be installed is the only DTTA in the system, then set the jumper as shown in the illustration to the right. This is the factory setting.


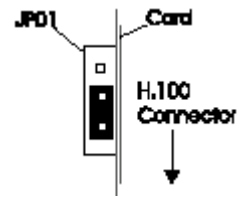


Figure B

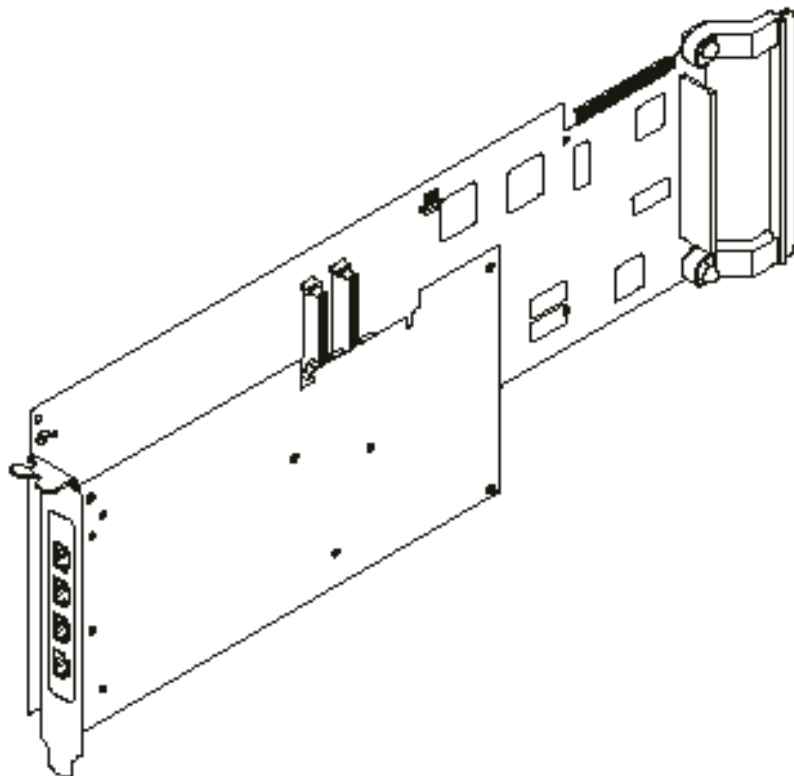

Connecting H.100 Adapters Together

Prerequisites

Before connecting the H.100 adapters together, note the following:

- H.100 adapters should ideally be in adjacent slots.
- For H.100 adapters, the termination jumper JP1 must be set for the adapter at each end of the chain. For details see the section “Jumper Installation Information”.
- When installing the H.100 cables on the DTTAs, leave any unused connectors tucked neatly inside the machine.


IBM Quad Digital Trunk Telephony PCI Adapter Internal Cabling

Multi-drop cable assemblies are used to connect the internal busses of installed DTTA's. There are two top card cables, FC 2877 and FC 4353 along with three Grouping Indicator codes for FC 2877.

FC 2877 and FC 4353 are used to connect multiple DTTA's to each other as well as other adapters with H.100 connectors, see below. FC 2877 cable is just long enough to connect four adapters that support H.100 connectors in adjacent slots. FC 4353 can be used for more than four adapters and/or to bridge gaps between adapters.

H.100, 4-Drop Cabling: The DTTA's have H.100 top card connectors.

The following figure illustrates the internal cabling for the DTTA's with the H.100 top card connectors cabled together. Up to four DTTA's are supported and must be in adjacent slots. Refer to “Jumper Installation Information “ to position the jumper on JP1 on the base card.

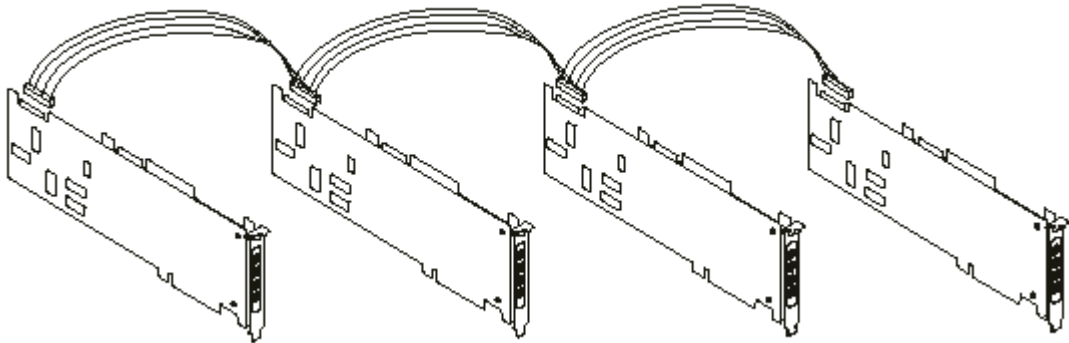

4 Drop H.100 Cable

Attention: Do not connect or handle the cable during a lightning storm.

Connecting a DTTA Adapter to the Telephone Network

Prerequisites

One to four RJ-48C telephony cables for each DTTA adapter. See Section "Cables and Connectors"

Procedure

Connect the appropriate RJ-48C cable from the telephony network to the desired port on the DTTA. Making sure that the transmit-to-network pins at one end are connected to receive-from-network pins at the other end, and vice versa. See Section "Cables and Connectors"

Note: The 4- RJ45/RJ48C ports of the DTTA adapter are numbered 1, 2, 3 and 4. These will correspond to WebSphere Voice Response for AIX trunks numbered:

- On the first adapter: 1, 2, 3, and 4
- On the second adapter: 5, 6, 7, and 8
- On the third adapter: 9, 10, 11, and 12
- On the fourth adapter 13, 14, 15 and 16.

Important Notes.

In the United States, when the DTTA is connected to a central office switch via a T1 trunk, the connection must be made through a *Channel Service Unit* (CSU). The CSU protects the circuit against power surges and allows the telephony company to test the trunk.

In other countries, a CSU or equivalent device (e.g.. NT1, NCTE, NPD etc.) may be needed if connecting to a Central Office/Network Switch. A CSU or equivalent device may also be needed if connecting the DTTA to a PBX or channel bank etc. and the distance is such that the cable loss exceeds the requirements of G703 (6dB) or the cable exits the building.

Where 75 ohm connection is required this can be achieved with an appropriate Balun such as "Black Box Balun MT242A-M or MT242A-F". This particular Balun was certified as part of the approval testing of this adapter however, the local telecom company may specify a particular device.

Chapter 3. Problem Determination

The diagnostics for the DTTA are ONLY shipped as part of the Websphere Voice Response for AIX (WVR/AIX) software product. You will need to install WVR/AIX before you are able to test the DTTA adapters.

Installing DTTA Device Drivers

The diagnostic program for DTTA is 'rpqtest' which can be found in /usr/lpp/devices.iop_rpq after WVR/AIX has been installed and then the DTTA drivers installed from the WVR/AIX file system (WVR/AIX will tell you how to do this during installation).

DTTA device drivers should be installed using 'smitty' in the standard way.

Checking Installed Adapters

After installing the DTTA drivers, it is necessary to do a power-cycle, reboot or run the command 'cfgmgr' (as root) to get the DTTA devices recognised and configured.

To check that the DTTA device(s) have been correctly configured, perform the following command ...

```
lsdev - C | grep rpq
```

AIX will display two lines for each DTTA adapter installed, one for the adapter itself (rpqioX) and the other for it's device driver (ddrpqioX).

The following is an example of what you should see if four adapters are installed:

```
rpqio0      Available 1H-08      Quad Digital Trunk Telephony PCI Adapter (ID=13310008)
rpqio1      Available 1V-08      Quad Digital Trunk Telephony PCI Adapter (ID=13310008)
rpqio2      Available 1Z-08      Quad Digital Trunk Telephony PCI Adapter (ID=13310008)
rpqio3      Available 1D-08      Quad Digital Trunk Telephony PCI Adapter (ID=13310008)
ddrpqio0    Available 1H-08-00    Digital Telephony Device Driver
ddrpqio1    Available 1V-08-00    Digital Telephony Device Driver
ddrpqio2    Available 1Z-08-00    Digital Telephony Device Driver
ddrpqio3    Available 1D-08-00    Digital Telephony Device Driver
```

If the adapter and device driver have been correctly configured, both should be shown as 'Available' (the 'Defined' state indicates that the adapter has not been detected or configured, or the device driver has not configured correctly).

The third column in the above display (e.g. 1H-08) indicates the slot position for the adapter. Refer to the Users Manual for the system unit for details of how the information in this field maps to a physical slot.

Running diagnostics (no wrap plugs)

Hardware diagnostics can be run on the DTTA but only when WVR is not active as otherwise WVR will experience unexpected failures. Therefore, before attempting to run diagnostics on the DTTA, bring WVR down (from the GUI or using the command DT_shutdown).

To run DTTA hardware diagnostics, proceed as follows ..

- 1) login to AIX
- 2) become root
- 3) enter the following commands to set up the diagnostic test environment

```
export RPQPATH=/usr/lpp/devices.iop_rpq
export PATH=$PATH:/usr/lpp/devices.iop_rpq/bin
```

4) To test an adapter once, enter

```
rpqtest <X> 99 -l
```

Where <X> is the card number corresponding to rpqio<X>

You will be asked to confirm the PMC ID (should be 0xa1331) and then the test will proceed through the various tests. If the diagnostics do not find any problems with the adapter, they will end with the message 'Tests Completed Successfully.

5) To test a single adapter continuously until stopped, add the -C option to the above

Note that the above test do not require wrap plugs to be installed on the telephony (RJ45) interface.

You should repeat the above command for each adapter in the system to ensure that the hardware is working.

If any test fails, the most likely cause is a faulty adapter which should be replaced.

Running diagnostics (with wrap plugs)

To test the adapter with installed wrap plugs and the full set of diagnostics, 4 X "RJ48 plug cable wrap" IBM part number 87H3588 are required. These should be temporarily plugged into the adapter back plate for all four trunks in place of the T1/E1 cable.

Then follow the above procedure for running the diagnostics but with no parameters on 'rpqtest' and follow the instructions to test the adapter(s) with external wrap plugs installed.

If any test fails, first check that the wrap plugs are correctly seated and try re-running the diagnostics. If a failure persists, change the adapter card.

Adapter LEDs

The DTTA has a single LED on the bottom of the card. This will stay orange while the system is being booted and while diagnostics are being run on the DTTA. After installing the DTTA device drivers and after running diagnostics, this LED should turn green.

If the LED stays orange and the system has been fully booted, the card may be faulty (check for installed adapters and device drivers as described above and then run diagnostics to make sure that the card is good).

Unlike its predecessor (DTXA), DTTA does NOT have LEDs per T1/E1 trunk to show the state of the individual trunks. Instead, a utility is provided with WVR/AIX (DTXA_alarms) which will show the trunk enabled and alarm state for both DTXA and DTTA.

Chapter 4. Telecommunications Cables and Connectors

This section provides guidance on network cables for the attachment of the DTTA to the T1 or E1 Digital trunk.

The DTTA is configured as DTE, therefore the cable type needed will depend on the configuration of the equipment the DTTA is being connected to :-

Connecting to equipment configured as DTE.....Use crossover cable.

Connecting to equipment configured as DTE..... Use Straight through cable

Common types are:-

RJ-48C/RJ-48C Crossover Cable. (Transmit and Receive pairs cross over in the cable)

RJ-48C/RJ-48C Straight Through. (Transmit and Receive pairs carried through cable)

RJ-48C/DB15 Crossover Cable. (Transmit and Receive pairs cross over in the cable)

RJ-48C/DB15 Straight Through. (Transmit and Receive pairs carried through cable)

RJ-48C/ Bare ends (For MDF IDC must have 22/24 AWG solid core)

IBM do not provide these cables, they can be obtained from commercial cable suppliers in a variety of specifications and lengths to suit the particular installation. It is recommended that the cable and connectors used, meet the following specification:-

1) The DTTA conforms to CCITT G703 which states:

- “For E1 the total loss between the transmitted and received signal must be no more than 6dB at 1024 kHz”
- “ For T1, the power level at 772 kHz of the received signal must be in the range +12dBm to +19dBm measured in a 3 kHz bandwidth”

Therefore joining cables to achieve required length should be avoided as each joint introduces loss and is a potential point of failure.

2) The cable should be ideally 22/24 AWG gauge with an impedance of 100 ohm (T1) or 120 ohm (E1), and the send and receive pairs should be individually shielded twisted pairs with the shielding connected to the connector shield. The cable should have an outer PVC jacket and be shielded using either foil and drain wire (US style) or foil and braid (European style). This shielding is particularly important in a NEBS-compliant Telco service provider or similar environment where extensive cable securing or tying may lead to bi-polar violations due to EMC interference between cables.

3) To conform with good electrical practice, cable routing should not be close to wiring that carries mains voltage or high currents, in order to minimise any noise induced in the telephony cabling.


4) Cables should be clearly labelled at each end such that they can be easily identified from end to end.

5) Please note T1 cable is not the same as CAT5 cable, even though they both have 100 ohms impedance. Always use T1.

See the following pages for more detail


RJ-48C Jack Connector Socket

The following illustration shows an RJ-48 jack connector. The Table lists the pin assignments for the T1 and E1 electrical interfaces.

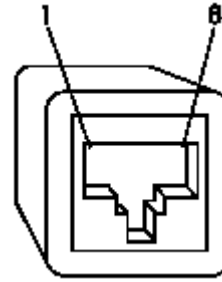

RJ-48C Connector Pin Assignments

Signal Name	I/O	RJ-48 Connector
TX1 (ring)		
TX2 (tip)	O	04
	O	05
FGND	---	06,07,08,03
RX1 (ring)	I	01
RX2 (tip)	I	02
FGND	---	Housing

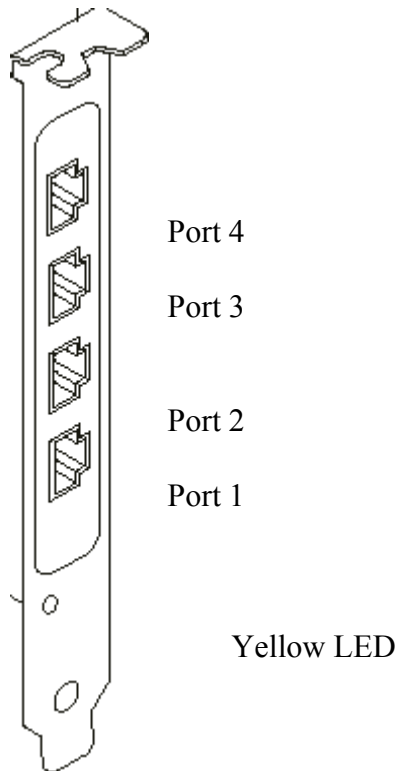


DTTA Adapter Backplate

T1/E1 Crossover cable: RJ-48C/RJ-48C

Install the RJ-48C/RJ48C crossover cable when the interface the DTTA is being connected to an interface that transmits on pins 1 and 2 and receives on pins 4 and 5

RJ-48C/RJ-48C crossover cable

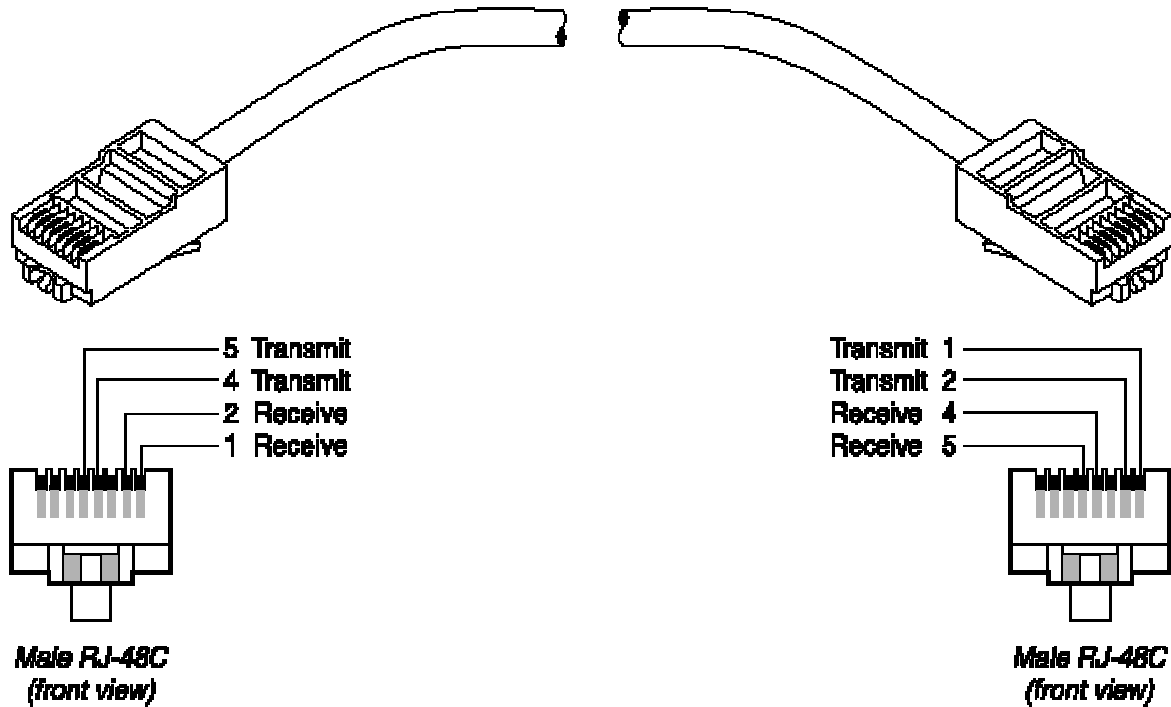

Connects to DTTA


Connects to T1/E1 Source

Note: Ground/Shield connections are not shown in this diagram

T1/E1 Straight-Through cable: RJ-48C/RJ-48C

Install the RJ-48C/RJ48C straight - through cable when the interface the DTTA is being connected to an interface that transmits on pins 4 and 5 and receives on pins 1 and 2

RJ-48C/RJ-48C straight - through cable

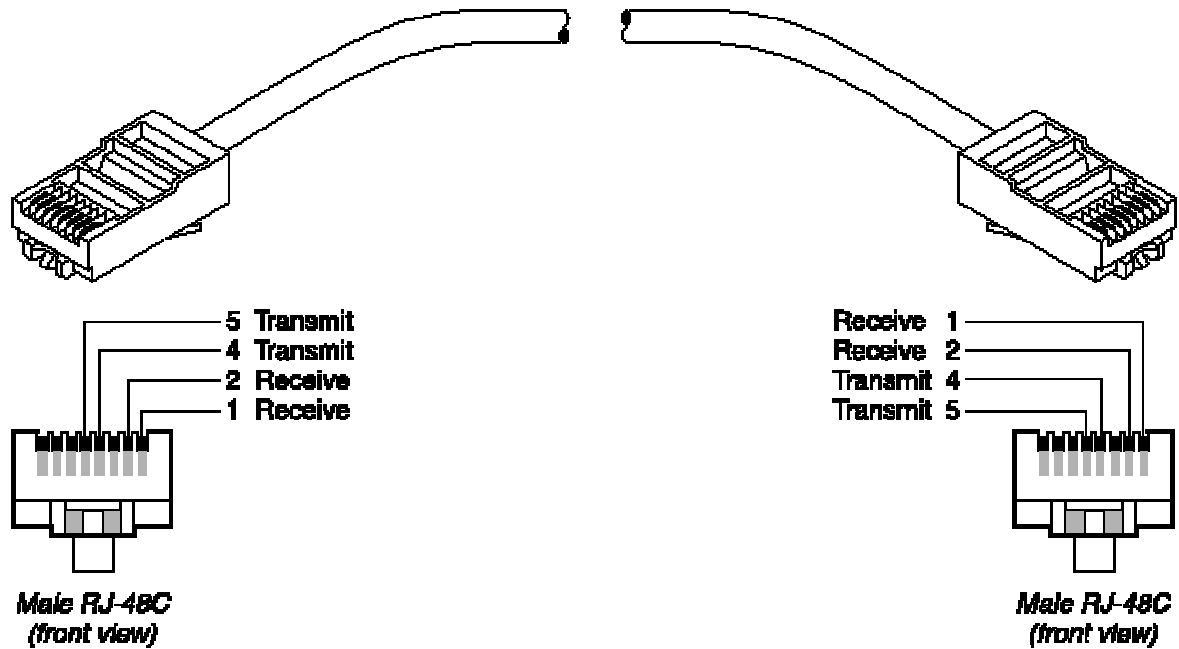

Connects to DTTA


Connects to T1/E1 Source

Note: Ground/Shield connections are not shown in this diagram

T1/E1 Crossover cable: RJ-48C/DB15

Before installing the RJ-48C/DB15 crossover cable check that T1/E1 source that is being connected to the DTTA transmits on pins 1 and 9 and receives on pins 3 and 11.

RJ-48C/DB15 crossover cable

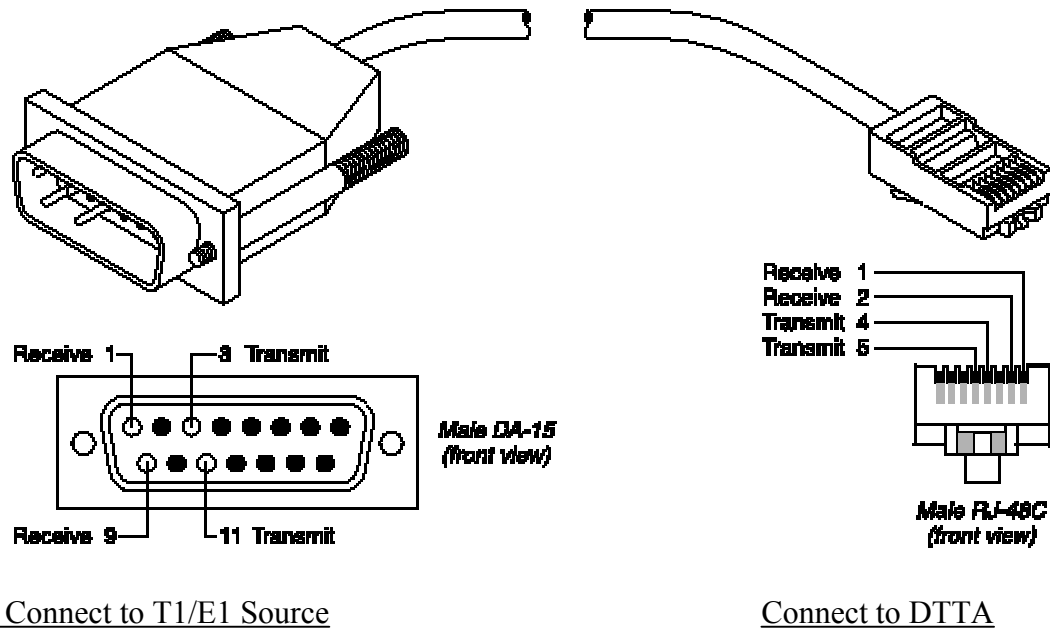


Note: Ground/Shield connections are not shown in this diagram

T1/E1 Straight - Through cable: RJ-48C/DB15

Before installing the RJ-48C/DB15 crossover cable check that T1/E1 source that is being connected to the DTTA transmits on pins 3 and 11 and receives on pins 1 and 9.

RJ-48C/DB15 straight - through cable

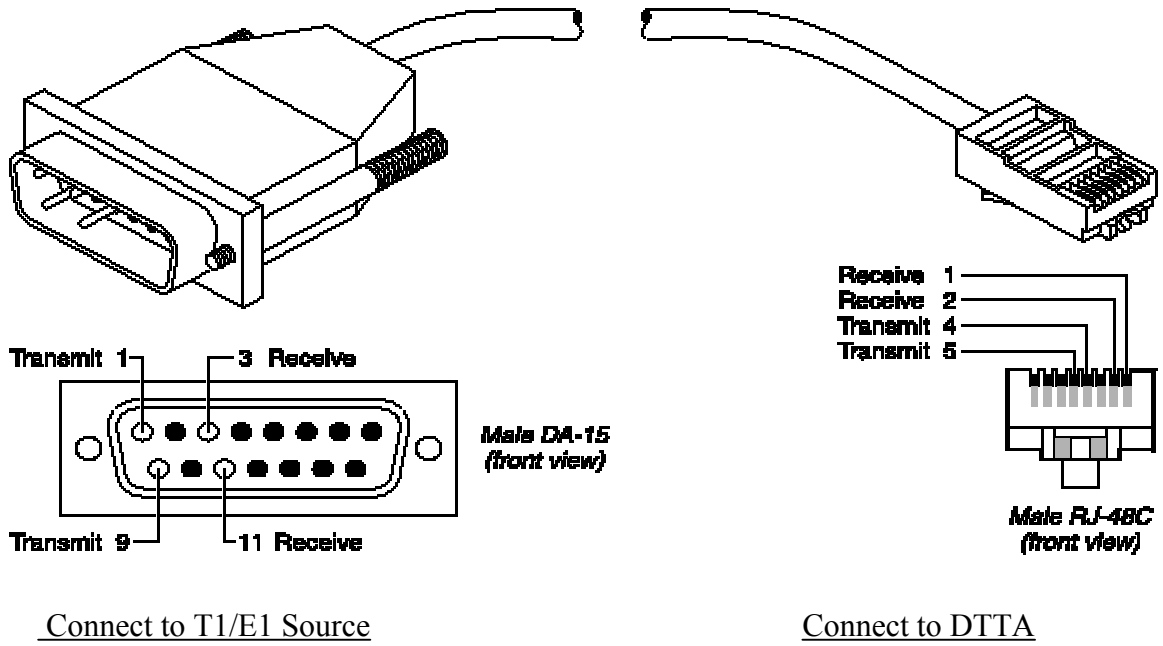

Note: Ground/Shield connections are not shown in this diagram

Appendix A. Communications Statements

The following statement applies to this product. The statement for other products intended for use with this product appears in their accompanying documentation.

Federal Communications Commission (FCC) Statement

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Neither the provider nor the manufacturer are responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorised changes or modifications to this equipment. Unauthorised changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

European Union (EU) Statement



Hereby, the manufacturer, declares that the IBM Quad Digital Trunk Telephony PCI Adapter is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The full Declaration of Conformity is available from IBM's Homologation and Type Approval Department in LaGaude.

This product has been tested and found to comply with the limits for Class A Information Technology Equipment according to CISPR 22 / European Standard EN55022. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.

Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

International Electrotechnical Commission (IEC) Statement


This product has been designed and built to comply with IEC Standard 950.

Avis de conformité aux normes du ministère des Communications du Canada

Cet appareil numérique de la classe A est conforme a la norme NMB-003.

Canadian Department of Communications Compliance Statement

This Class A digital apparatus complies with ICES-003.

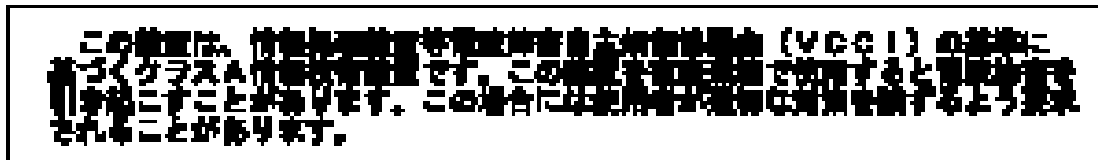VCCI Statement

The following is a summary of the VCCI Japanese statement in the box above.

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

Electromagnetic Interference (EMI) Statement - Taiwan**警告使用者:**

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

The following is a summary of the EMI Taiwan statement above

Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user will be required to take adequate Measures.

Radio Protection for Germany (NEEDS UPDATING)

Dieses Gerät ist berechtigt in Übereinstimmung mit dem deutschen EMVG vom 9.Nov.92 das EG-Konformitätszeichen zu führen.

Der Aussteller der Konformitätserklärung ist die IBM Germany.

Dieses Gerät erfüllt die Bedingungen der EN 55022 Klasse A. Für diese von Geräten gilt folgende Bestimmung nach dem EMVG:

Geräte dürfen an Orten, für die sie nicht ausreichend entstört sind, nur mit besonderer Genehmigung des Bundesministers für Post und Telekommunikation oder des Bundesamtes für Post und Telekommunikation betrieben werden. Die Genehmigung wird erteilt, wenn keine elektromagnetischen Störungen zu erwarten sind.

(Auszug aus dem EMVG vom 9.Nov.92, Para.3, Abs.4)

Hinweis

Dieses Genehmigungsverfahren ist von der Deutschen Bundespost noch nicht veröffentlicht worden.

China, EMC Statement

声 明

此为 A 级产品, 在生活环境中,
该产品可能会造成无线电干扰。
在这种情况下, 可能需要用户对其
干扰采取切实可行的措施。

Telecommunications Statements**FCC Part 68 Compliance Information**

The IBM Quad Digital Trunk Telephony PCI Adapter complies with Part 68 of the FCC rules (TIA/EIA-TSB-168).

The label located on the back side of the adapter contains, among other information, the FCC registration number for this equipment. If requested, provide this information to the local telephone company.

The IBM Quad Digital Trunk Telephony PCI Adapter is designed to be connected to the telephone network or premises wiring using a compatible modular RJ-48 plug and cable, which are Part 68 compliant.

If the IBM Quad Digital Trunk Telephony PCI Adapter causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you will be notified as soon as possible. You will be advised of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper operation of your equipment. If they do, you will be given advance notice so as to give you an opportunity to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, in the United States, call IBM at **1-800-IBM-SERV**. In Canada, call IBM at **1-800-465-6600**. No repairs can be performed by the customer.

Canada Telecommunications Statement

NOTICE: This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

AVIS : Le présent matériel est conforme aux spécifications techniques d'Industrie Canada applicables au matériel terminal. Cette conformité est confirmée par le numéro d'enregistrement. Le sigle IC, placé devant le numéro d'enregistrement, signifie que l'enregistrement s'est effectué conformément à une déclaration de conformité et indique que les spécifications techniques d'Industrie Canada ont été respectées. Il n'implique pas qu'Industrie Canada a approuvé le matériel.

Australian Telecommunications Statement (New Statement Needed)

A mandatory statement may be issued by Austel when Type Approval is granted.

Notices for New Zealand Users (New Statement needed)

A mandatory statement may be issued by Telecom NZ when Type Approval is granted.